

Use of Commodities

Be sure to read the instruction manual for proper use of this product. This manual includes a warranty card.

The appearance and specifications of the product are subject to change without notice to improve the performance of the product.


Product information and parts

ROWING MACHINE Instrument panel Fly-catching Front support Back support Foot-fixing plate

Product information

Saddle type	Foot fixed, slide mil saddle	
Display information	Time, Prequency, Distance, Calories, Total Distance	
Exercise intensity control	Steps 1 to 10	
roduct Size (mm) 2420(L) * 620 (W) * 1060 (H)		
Box size (mm)	1420(L) * 420 (W) * 550 (H)	
Product weight	N.W: 32KG / G.W: 38KG	
color	black	
Proper user experience	130Kg	
	13-105	

Configurator

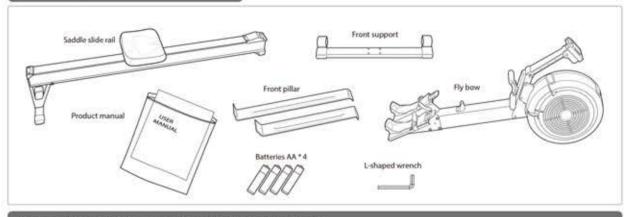

Preparation before installation / Safety precautions

- Please clean up the surroundings before installation.
- If the surrounding sees is cluttered, it may be difficult to identify the part. - It is somenion to assemble if necessary parts are removed before installation
- -In addition to the enclosed assembly tools, you can use the household tools (electric drill, spurmer) to
- · As soon as you purchase a fitness equipment, make sure that the parts are free of blood or sharp edges.
- Accidental injury to the sharp part may occur when the shild is injured by the appliance damage during taise or playing around the furniture
- · The exercise equipment should be placed on a flat surface and the small exercise equipment should be kept in a separate place that is not accessible to children. - Children, such as dambbells and babies, can usuar fractures in children, and the equipment on highground can roll over and get hurt.
- . When you exercise, clean up your surroundings and do your own workout.
- It may full from the exercise equipment and cause accidents to hit nearby · Immediately contact the manufacturer or distributor if defects are found
- -If a product defect is found, contact the manufacturer and deal with it immediately, and if the consumer is expected to be harmed, report it to the Korra Consumer Agency Please do not use this product for several people at the same time.


Failure to observe this precaution could result in personal injury or damage to property or health.

- Prevent children and companions from approaching the workout.
- The child has account of the nursing treadmill or indoor cycle in which the child is nursing, and the belt is fingered with
- · Before and after the exercise, we check the power state of the instrument and the state of the product.
- After exercise, be sure to turn off the power of the appliance to prevent accidents caused by the equipment in operation . Whether the product has been fixed well, whether the screw of the product is well fixed (it does not shake) Please make: que abir intercise.
- Before using the product, pieue check again that your ankles are well accord.
- Do not exercise too suddenly.
- If you have low exercise, do not exercise too suddenly.
- Work out after 40 minutes.
- · If you are uncomfortable with your body, you need to be sensitive and careful. When using patients and children with disabilities, prognant women and the elderly, it is always safe to use products

If you experience any symptoms such as dizzness, vorniting, heart attack or cold sweating, during exercise, stop exercising immediately and consult with your healthcare provider.

Disclaimer

- We assume liability for damages caused by use in case of earthquake, lightning, storm and flood and topic of liability of our company, act by third party, other accidents, consumer intention or negligence, misuse, not.
- -We are not responsible for any incidental damages (loss of business profits, interruption of business, etc.) resulting from the use or inability to use this product. We will not be liable for damage caused by failure to observe the contents of the instruction manual.

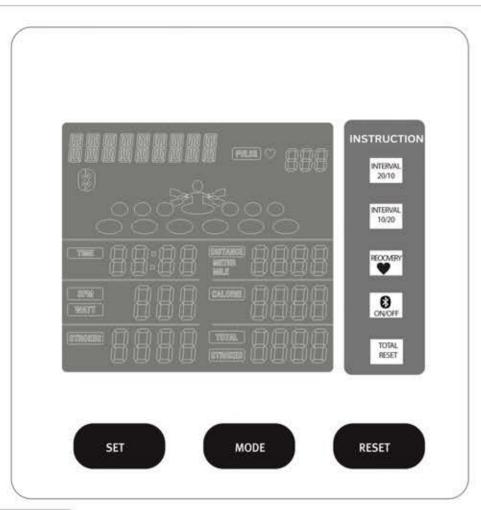

Detail of fuction

■ Auto-power off

When you start a workout, press any button to turn on the instrument panel. If you do not use it for 4 minutes, the instrument panel will turn off automatically

Initialization

You can resume your device by associating the battery or by pressing and holding the reset key for 3 seconds

■ Mode

If you press the MODE button momentarily, you can select the number of times, distance, etc. by hand.

Button Function

Select (SET)

Select time, number of times, distance, and calories.

Mode (MODE)

You can select the desired function. Press and hold for 3 seconds to initialize the instrument cluster

Initialization (RESET)

Initialize each function except the total count (time, frequency, distance, calories)

battery

4 AA batteries

Four AA batteries are inserted into the instrument panel.

■ Time

Shows the total time that you have begun to play silver.

■ Number of times

Visa displays the number of times

■ Distance


Displays the distance of silver.

■ Number of times

Displays the cumulative number of species.

Show meter

Time 0: 00 ~ 99:59 0-9999 times Distance 0.0-999.9 Km Calorie 0.0-999.9 KCAL 0.0-9999 total times

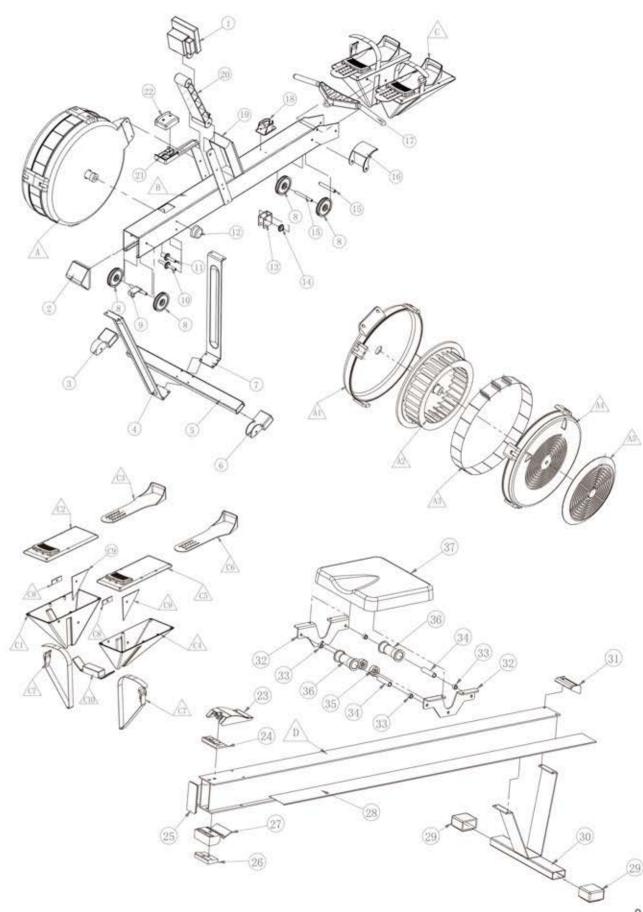

Attached List | This page is for replacement parts and A / S.


NO	Part Name	Q7:
1	display unit	1
2	end cap frame	1
3	wheel end cap right	1
4	foot tube support front	1
5	foot tube front	1
6	wheel end cap left	1
7	foot tube support rear	1
8	idler belt	4
9	idler bracket	1
10	gear assembly b	1
11	gear assemply a	1
12	cap fan shaft	1
13	chain holder	1
14	gear	1
15	pedal shaft	2
16	frame connection cover	1
17	handle assembly	1
18	handle holder	1
19	display holder bracket lower	1
20	display holder bracket upper	2
21	speed sensor holder bottom	1
22	speed sensor holder top	1
23	frame connection holder up	1
24	frame connection bracket up	1
25	end cap slider	1
26	frame connection bracket down	1
27	frame connection holder down	1
28	slider pad	1
29	end cap foot tube rear	2
30	foot tube assembly rear	1
31	back cover slider	1
32	cushion bracket	2
33	inner bushing short	6
34	inner bushing long	2
35	tension wheel down	2
36	tension wheel up	2
37	cushion	1


D A	slider	
200	Stidel	- 1
	resistance control unit	1
A1	fan base	1
A2	fan	2
А3	resistance controller	1
A4	flow controller	1
A5	fan cover	1
В	frame assembly	1
С	pedal assembly	1
C1	pedal base right	1
C2	pedal cover right	1
C3	foot pad right	1
C4	pedal base left	1
C5	Small ribbon wheel	1
C6	Ribbon axle	1
C7	Hand pull pipe	2
C8	Ribbon fixed seat left	2
C9	Ribbon fixed seat right	2
C10	Ribbon fixed pin	1

A Front / Front Support

1 Remove bolts and washers from front support
The bolts and nuts used for assembly are attached to the front support (5).
Remove bolt and washer from front support (5).


2 Front support first combination
On the groove of the front support (5), connect the short support (7) column and the long support (4) column with bolts, washers and wrenches as shown.

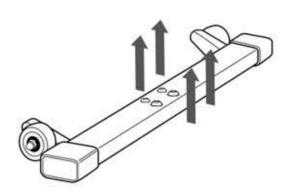

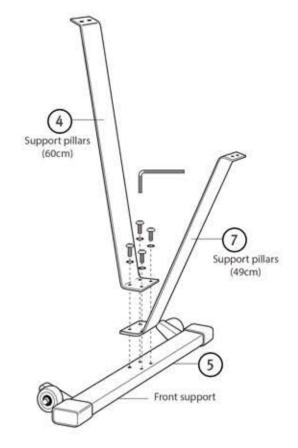

3 Remove the bolt and washer from the body heel
The bolts and must used for assembly are attached to the body holes.
Remove the bolt and washer from the main body.


Combine front support and body
Combine the front support with the bolt, washer and wrench

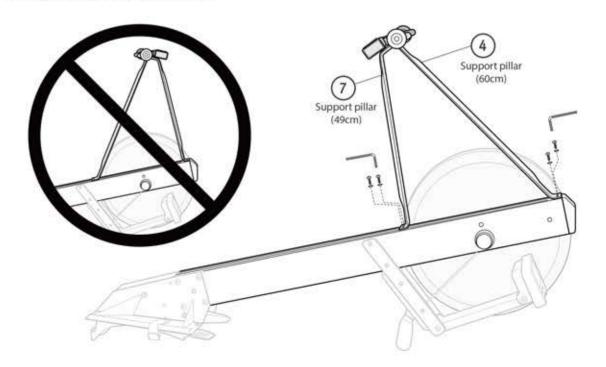


05

B Connecting saddle slide rails and fly


Open the fly-heel safety cap
Between the feet of the assembled flywheel, the safety cap opens up to
make the sound of the driver.

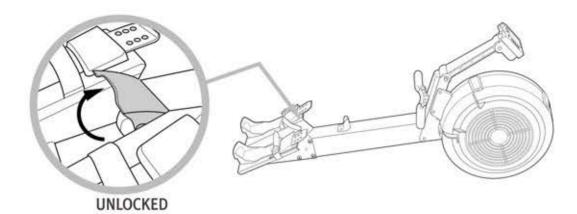

2 Fly-fill and slide-lift
Hold the foot strap of the opened fly's hand with your safety
cap and hold the saddle slide with your right hand.

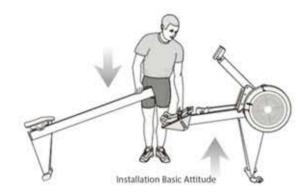


ply white and slide connection
Insert the saddle slide into the groove on the inside of the fly iron safety cap, and close the safety cap so that the sound of the driver is heard.

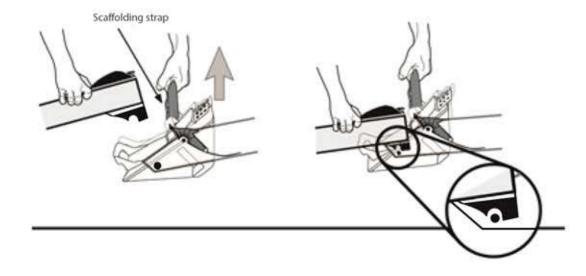

C Separate saddle rail and body heel


Open the flywheel safety cap

Between the feet of the assembled flywheel, open the safety cap so that it clacks up.

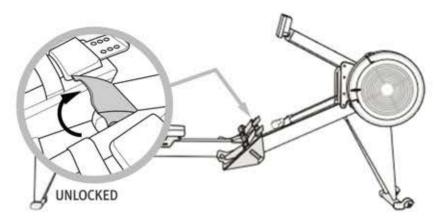

2 Lift the slide

Lift the slide slightly and remove it from the main body.

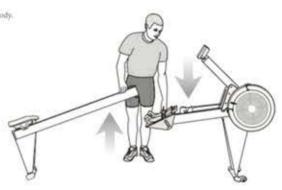


A

* Always keep the safety cap locked when the flywheel and slide rail are connected. If it is not locked, it may get hurt or lifted.

D Using aerials

Close the fly hill safety cap and use aerodynamics.

Close the safety cap and exercise safety

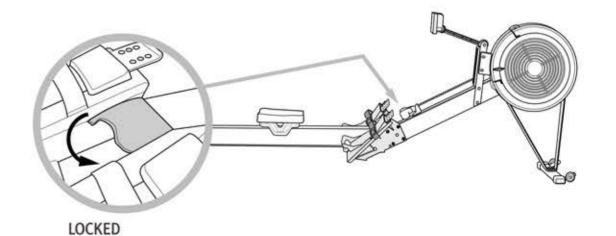

07

Be sure to separate the slide rail and fly heel and place them as shown in the picture. Keep the flywheel down and keep it from shaking.

* Please do not keep the product in your hands. Be sure to keep it separate




09

- * Worn or weakened parts such as chains, sprockets, rotating connectors, handle U bolts or shock cords may cause
- *When not in use, the seat can be pulled to the front of the monorail.

® Rowing machine movement posture


The first step of the lever (CATCH) posture adjustment: Do not straighten the spine, bend it below 30 degrees, and comfortably grasp the handle with one wrist.

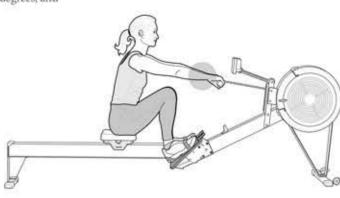

2. Medium (MIDDLE) posture

Intermediate posture


Use your leg muscles to hold the foot while keeping your arms straight. When the leg is about half stretched, it slides back.

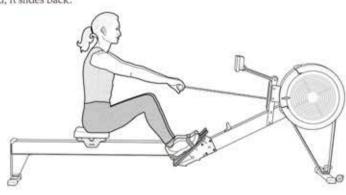


3. FINISH Posture


Stretch your legs with your leg muscles and pull the accelerated handle to the middle of your abdomen.

Re-do the cover action

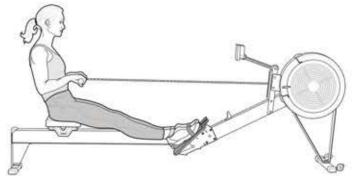


After you finish the rowing exercise, please hang the handle on the handle or the chain hook.

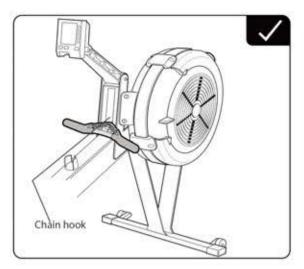


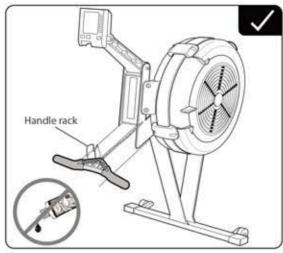

Oil does not need to be injected into the handle chain.

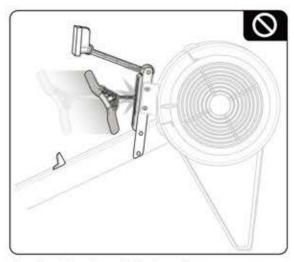


Don't suddenly undo the handle. May cause damage or failure.

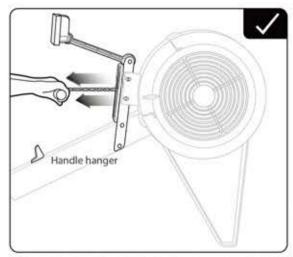


Hold the handle with both hands and pull with even force.


Always use the heel shaft lock mode when moving or using the rowing



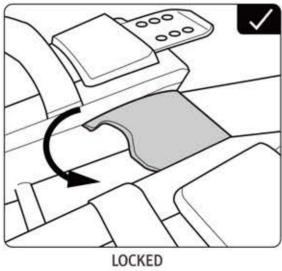

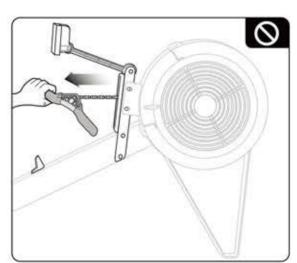

Do not pull the handle with one hand. Incorrect use of the chain may result in injury.

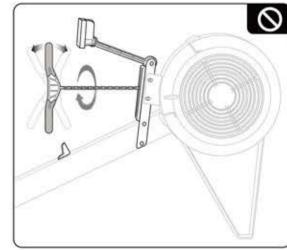


Never turn off the handle or pull the handle to the left or right.


11




Do not allow children, companion animals, or fingers to touch the saddle during the rowing workout. Saddle injuries may result.

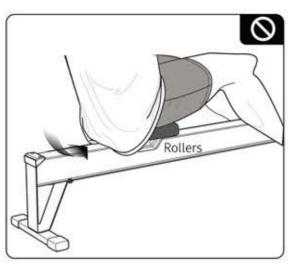

Be careful not to get your clothes between the saddles.

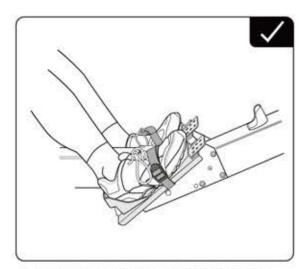

Always wear sneakers and fasten your instep with your straps when you're working on a rowing machine.

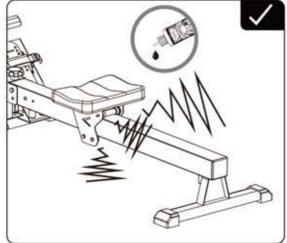

If you hear noise from the saddle during exercise, if you inject grease into the lower saddle roller, noise may be reduced.